

# MDX-IP65

## Integrated Servo Motor



Hardware Manual

Rev. 1.1

**SHANGHAI AMP&MOONS' AUTOMATION CO.,LTD.**


1	Introduction .....	4
1.1	Part Numbering .....	4
1.2	Features .....	5
1.3	Block Diagrams .....	6
1.4	Safety Instructions.....	8
2	Getting Started.....	9
2.1	Installing Software .....	9
2.2	Mounting the Hardware.....	9
2.3	Choosing a Power Supply .....	10
2.3.1	Supply Voltage .....	10
2.3.2	Regeneration Clamp .....	10
2.3.3	Supply Current .....	11
3	Connections.....	12
3.1	Connecting the Power Supply.....	12
3.1.1	Connect Main Power Supply .....	12
3.2	Connecting the MDX Communications .....	13
3.2.1	Connecting to a Host using RS-485 .....	13
3.2.2	Connecting to a Host using CANopen.....	16
3.2.2.1	Node ID .....	18
3.2.2.2	Setting the Baud rate .....	18
3.2.3	Choosing the Right COM Port.....	18
3.3	Inputs and Outputs.....	19
3.3.1	Inputs.....	19
3.3.1.1	Connector Pin Diagram.....	21
3.3.1.2	STEP & DIR Digital Inputs .....	22
3.3.1.3	X3/X4/X5 Digital Inputs .....	23
3.3.2	AIN Input.....	24
3.3.3	Programmable Output Y1/Y2/Y3/Y4 .....	25
4	Troubleshooting .....	26
4.1	Status (STAT) LED Error Codes.....	26
5	Reference .....	27
5.1	Torque-Speed Curves .....	27
5.2	Mechanical Outlines.....	28
5.2.1	MDX IP65 200W.....	28
5.2.2	MDX IP65 400W.....	29
5.3	Technical Specifications .....	30
5.4	System Configuration and Accessories .....	31
5.5	SCL Command Reference .....	34
6	Contacting MOONS' .....	36

Part Number		RS-485	CANopen
16-bit magnetic encoder	1024 Lines magnetic encoder		
MDXL61GN3RA000	MDXL61GNMRA000	✓	
MDXL62GN3RA000	MDXL62GNMRA000	✓	
MDXL61GN3CA000	MDXL61GNMCA000		✓
MDXL62GN3CA000	MDXL62GNMCA000		✓
MDXL61GN3RAP10	MDXL61GNMRAP10	✓	
MDXL61GN3RAP20	MDXL61GNMRAP20	✓	
MDXL61GN3RAP40	MDXL61GNMRAP40	✓	
MDXL61GN3CAP10	MDXL61GNMCAP10		✓
MDXL61GN3CAP20	MDXL61GNMCAP20		✓
MDXL61GN3CAP40	MDXL61GNMCAP40		✓
MDXL62GN3RAP10	MDXL62GNMRAP10	✓	
MDXL62GN3RAP20	MDXL62GNMRAP20	✓	
MDXL62GN3RAP40	MDXL62GNMRAP40	✓	
MDXL62GN3CAP10	MDXL62GNMCAP10		✓
MDXL62GN3CAP20	MDXL62GNMCAP20		✓
MDXL62GN3CAP40	MDXL62GNMCAP40		✓
MDXL61GN3RB000	-	✓	
MDXL62GN3RB000	-	✓	
MDXL61GN3CB000	-		✓
MDXL62GN3CB000	-		✓
MDXL61GN3RBP10	-	✓	
MDXL61GN3RBP20	-	✓	
MDXL61GN3RBP40	-	✓	
MDXL61GN3CBP10	-		✓
MDXL61GN3CBP20	-		✓
MDXL61GN3CBP40	-		✓
MDXL62GN3RBP10	-	✓	
MDXL62GN3RBP20	-	✓	
MDXL62GN3RBP40	-	✓	
MDXL62GN3CBP10	-		✓
MDXL62GN3CBP20	-		✓
MDXL62GN3CBP40	-		✓

## 1 Introduction

Thank you for selecting MOONS' MDX Integrated Servo Motor. The MDX integrated servo motors combines servo technology with an integrated motor to create a product with exceptional feature and broad capability. We hope our commitment to performance, quality and economy will result in a successful motion control project.

### 1.1 Part Numbering

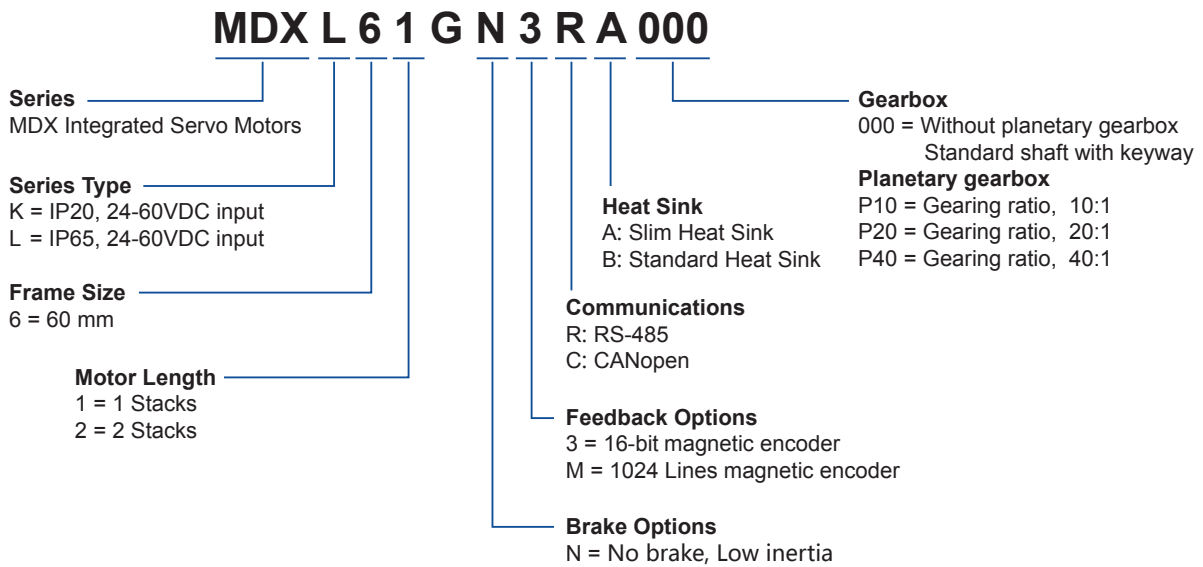


## 1.2 Features


- Programmable, digital servo driver and motor in an integrated package
- Operates from a 24 to 60 volt DC power supply
- Control modes:
  - \* Torque control
    - Analog input
    - SCL commanded
  - \* Velocity control
    - Fixed velocity
    - Analog velocity
  - \* Position control
    - Digital signal type Step & Direction, CW & CCW pulse, A/B Quadrature
    - Analog position
    - Serial commanded position
  - \* Communication control
    - RS485 (support Modbus)
    - CANopen mode control
  - \* Q Programming
    - Stand alone operation
- Communications Interface:.
  - \* RS-485, CANopen
- Encoder feedback:
  - \* 16-bit magnetic encoder
  - \* 1024 Lines magnetic encoder
- Power output:
  - \* MDXL61GN: 200 Watt rating
  - \* MDXL62GN: 400 Watt rating
- I/O:
  - \* Five optically isolated digital inputs, with adjustable bandwidth digital noise rejection filter, 5 to 24 volts
  - \* Four optically isolated digital outputs, 30V/100 mA max
  - \* Two analog inputs for torque, speed and position control, 0 to 10 volts(They can be configured to a -10 to 10VDC differential analog input.)
- Technological advances:
  - \* Full servo control,
  - \* Efficient, Accurate, Fast, Smooth
  - \* Intelligent, Compact
  - \* IP65 protected

### 1.3 Block Diagrams

MDX-IP65 RS485 Block Diagram

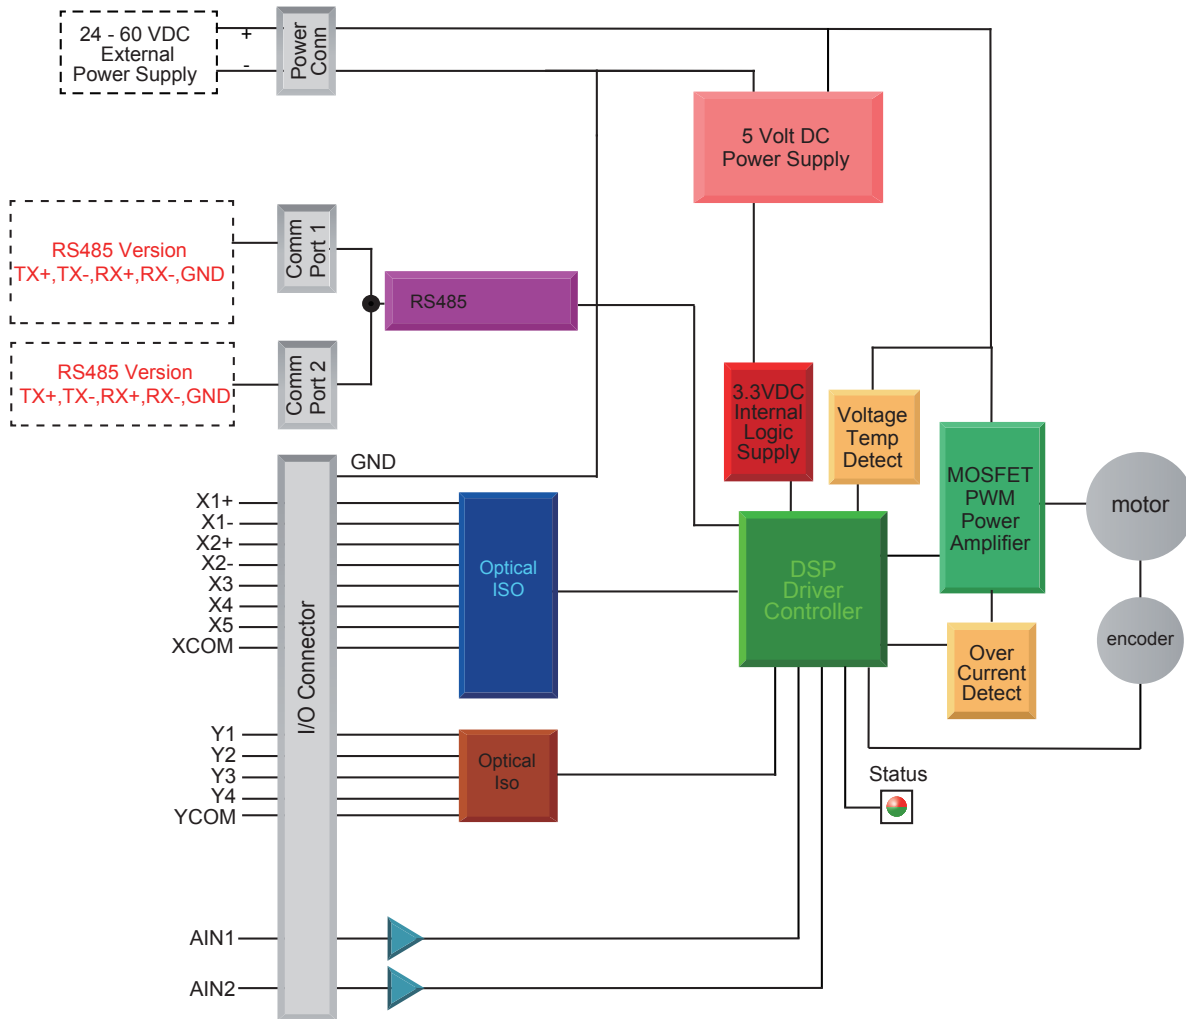

MDX-IP65 CANopen Block Diagram

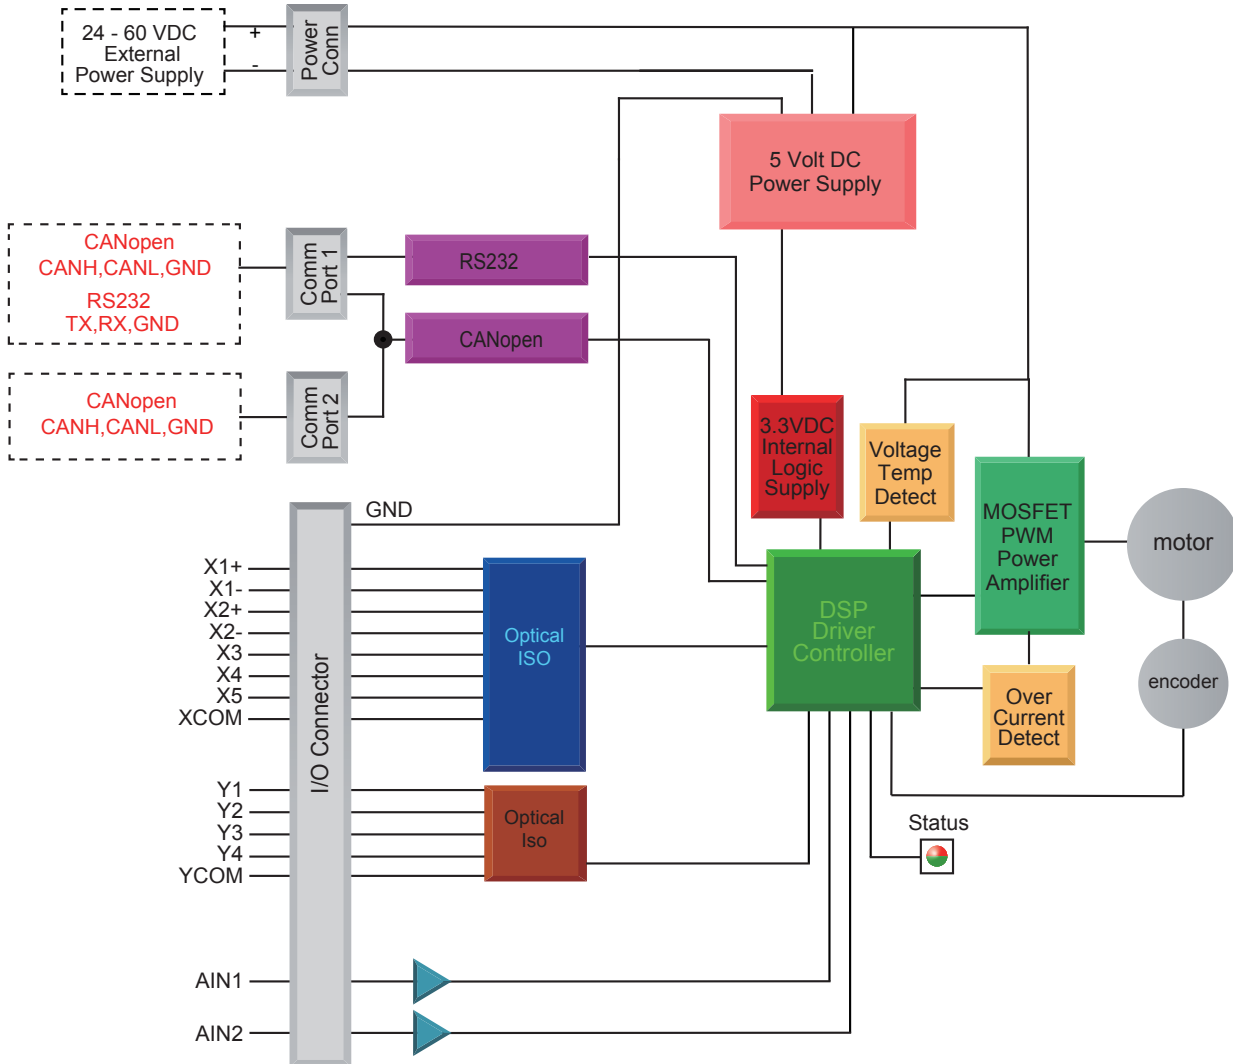

## 1.4 Safety Instructions

Only qualified personnel should transport, assemble, install, operate, or maintain this equipment. Properly qualified personnel are persons who are familiar with the transport, assembly, installation, operation, and maintenance of motors, and who meet the appropriate qualifications for their jobs.

To minimize the risk of potential safety problems, all applicable local and national codes regulating the installation and operation of equipment should be followed. These codes may vary from area to area and it is the responsibility of the operating personnel to determine which codes should be followed, and to verify that the equipment, installation, and operation are in compliance with the latest revision of these codes.

Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. MOONS' does not guarantee the products described in this publication are suitable for a particular application, nor do they assume any responsibility for product design, installation, or operation.

- Read all available documentation before assembly and operation. Incorrect handling of the products referenced in this manual can result in injury and damage to persons and machinery. All technical information concerning the installation requirements must be strictly adhered to.
- It is vital to ensure that all system components are connected to earth ground. Electrical safety is impossible without a low-resistance earth connection.
- This product contains electrostatically sensitive components that can be damaged by incorrect handling. Follow qualified anti-static procedures before touching the product.
- During operation keep all covers and cabinet doors shut to avoid any hazards that could possibly cause severe damage to the product or personal health.
- During operation, the product may have components that are live or have hot surfaces.
- Never plug in or unplug the Integrated Motor while the system is live. The possibility of electric arcing can cause damage.

Be alert to the potential for personal injury. Follow recommended precautions and safe operating practices emphasized with alert symbols. Safety notices in this manual provide important information. Read and be familiar with these instructions before attempting installation, operation, or maintenance. The purpose of this section is to alert users to the possible safety hazards associated with this equipment and the precautions necessary to reduce the risk of personal injury and damage to equipment. Failure to observe these precautions could result in serious bodily injury, damage to the equipment, or operational difficulty.



## 2 Getting Started

The following items are needed:

- a 24 - 60 Volt DC power supply, see the section below entitled “Choosing a Power Supply” for help in choosing the right one
- a PC running Microsoft Windows XP (SP3), or Windows 7, 8, or 10 with an RS-232 serial communication port, otherwise a USB to RS-232 serial port converter is needed. For CANopen drives, a CANopen Communication Tool software is required.
- A power cable, I/O cable, and communication cable. These 3 cables are NOT included and must be purchased separately.

### 2.1 Installing Software

Before utilizing the MDX Integrated Servo Motor and Artemis Software in an application, the following steps are necessary:

- Install the Artemis software from MOONS' website.
- Connect the drive to the PC using the programming cable. When using RS-485, it is best to be setup in a 4-Wire configuration (see Section 3.2.1 “Connecting to a host using RS-485” .)
- Connect the drive to the power supply. See instructions below.
- Launch the software by clicking Start...Programs...MOONS'.

### 2.2 Mounting the Hardware

As with any servo motor, the MDX must be mounted so as to provide maximum heat sinking and airflow. Keep enough space around the Integrated Motor to allow for the airflow.



- Never use the drive where there is no airflow or where other devices cause the surrounding air to be more than 40°C (104°F).
- Never use the drive where metal or other electrically conductive particles can infiltrate the drive.

## 2.3 Choosing a Power Supply

The main considerations when choosing a power supply are the voltage and current requirements for the application.

### 2.3.1 Supply Voltage


The MDX is designed to give optimum performance at 48 Volts DC. Choosing the voltage depends on the performance needed and motor/drive heating that is acceptable and/or does not cause a drive over-temperature. Higher voltages will give higher speed performance but will cause the MDX to produce higher temperatures. Using power supplies with voltage outputs that are near the drive's maximum may significantly reduce the operational duty-cycle.

The extended range of operation can be as low as 18VDC minimum to as high as 60VDC maximum. When operating below 24VDC, the power supply input may require larger capacitance to prevent under-voltage and internal-supply alarms. Current spikes may make supply readings erratic. The supply input cannot go below 18VDC for reliable operation. Absolute minimum power supply input is 18VDC. If the input supply drops below 15VDC the low voltage fault will be triggered. This will disable the drive.

Absolute maximum power supply input is 80VDC at which point an over-voltage alarm and fault will occur. When using a power supply that is regulated and is near the drive maximum voltage of 60VDC, a voltage clamp may be required to prevent over-voltage when regeneration occurs. When using an unregulated power supply, make sure the no-load voltage of the supply does not exceed the drive's maximum input voltage of 60VDC.

### 2.3.2 Regeneration Clamp

If a regulated power supply is being used, there may be a problem with regeneration. When a load decelerates rapidly from a high speed, some of the kinetic energy of the load is transferred back to the power supply, possibly tripping the over-voltage protection of a regulated power supply, causing it to shut down. This problem can be solved with the use of a MOONS' RC880 Regeneration Clamp. It is recommended that an RC880 initially be installed in an application. If the "regen" LED on the RC880 never flashes, the clamp is not necessary.


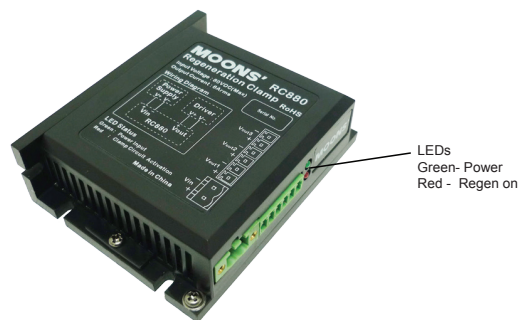


RC880 Regen Clamp

### 2.3.3 Supply Current

The maximum supply currents required by the MDX are shown in the charts below at different power supply voltage inputs. The MDX power supply current is lower than the winding currents because it uses switching amplifiers to convert a high voltage and low current into lower voltage and higher current. The more the power supply voltage exceeds the motor voltage, the less current will be required from the power supply.

It is important to note that the current draw is significantly different at higher speeds depending on the torque load to the motor. Estimating how much current is necessary may require a good analysis of the load the motor will encounter.

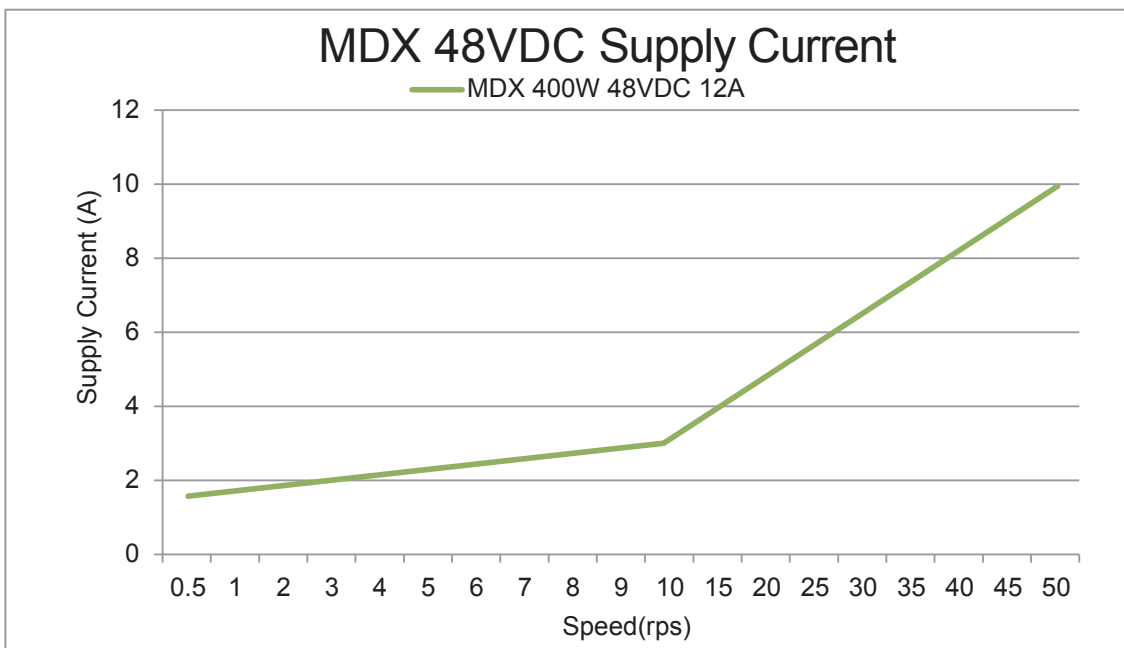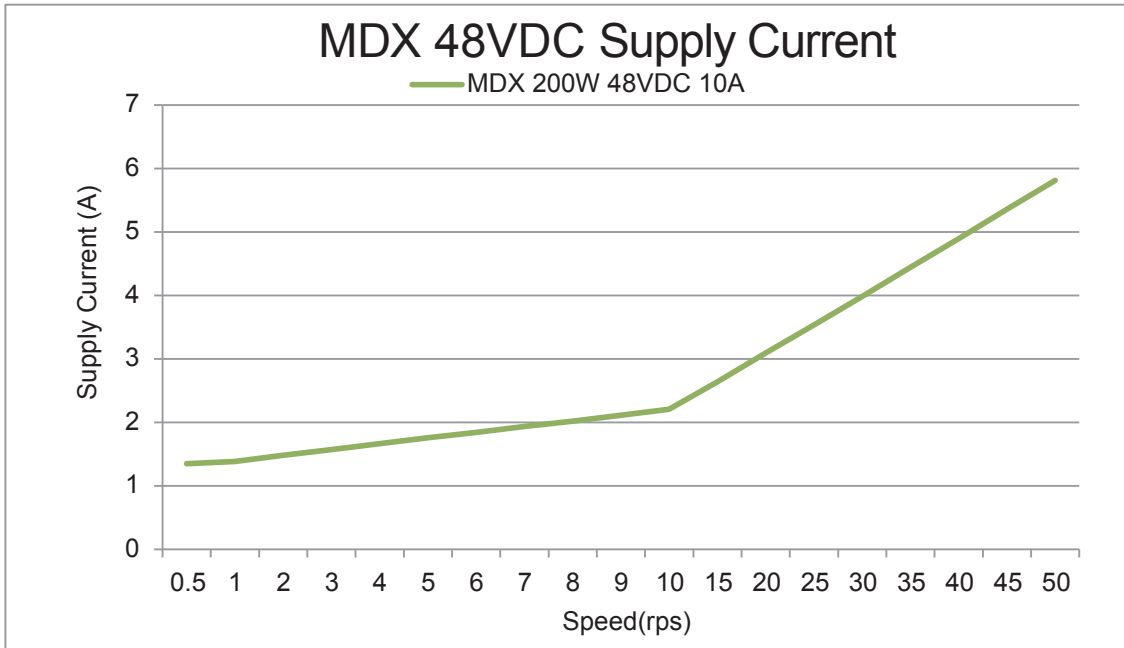

### 3 Connections

#### 3.1 Connecting the Power Supply


Use Moons' power supply mating cable following:

Model	Length	Shape
1639-100	1m	Straight
1639-200	2m	Straight
1639-300	3m	Straight
1639-500	5m	Straight
1636-100	1m	Angled
1636-200	2m	Angled
1636-300	3m	Angled
1636-500	5m	Angled

The MDX contains an internal fuse connected to the “+” terminal that is not user replaceable. If a user serviceable fuse is desired, install a fast acting fuse in line with the “+” power supply lead.

##### 3.1.1 Connect Main Power Supply

**MDX needs 24 to 60VDC for the main power supply.**

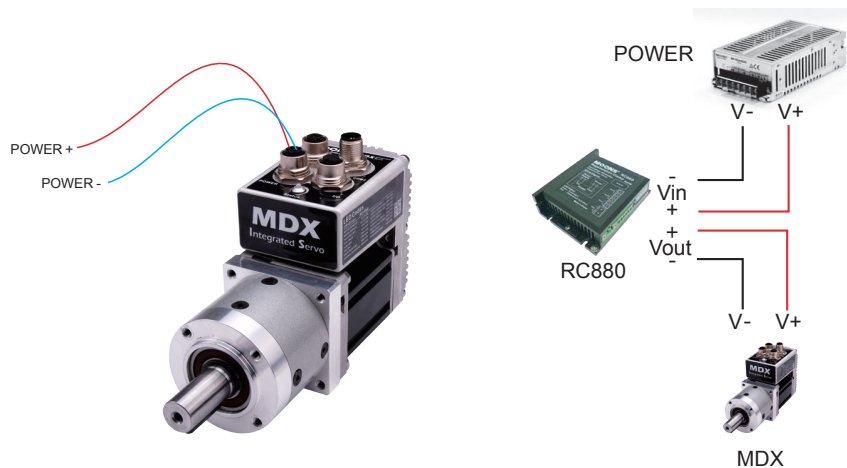

**Be careful not to reverse the wires. Reversing the connection may invalidate the internal fuse on the drive and void the warranty.**



The M12 Power Conn Diagram

MDX POWER CONN		
Pin	Signal	Color
1	V+(Power supply+)	Red
2	V-(Power supply-)	Yellow
3	NC	
4	NC	

### 3.2 Connecting the MDX Communications

The MDX is available with 2 different communications types, RS-485 /422(MDX□RA□), CANopen (MDX□CA□) . Each type requires a different hardware connection for interface to a PC or other Host system.

The communication mating cables are NOT included and must be purchased separately. For more information refer to the “Optional Accessories” section. Below are descriptions of how to interface all of these serial communication types to a PC.

#### 3.2.1 Connecting to a Host using RS-485


RS-485 communication allows connection of more than one drive to a single host PC, PLC, HMI or other computer. It also allows the communication cable to be long (more than 30 meters or 100 feet). A shielded cable is recommended.

The MDX can be used with either Two-Wire or Four-Wire RS-485 implementation. The connection can be point-to-point (i.e. one drive and one host) or a multi-drop network (one host and up to 32 drives).


**NOTE: To use the MDX RS-485 version with the Artemis software, it is better to be connected in the Four-Wire configuration (see below).**

Use MOONS' communication mating cables following:

Model	Length	Shape
2634-100	1m	Straight
2634-200	2m	Straight
2634-300	3m	Straight
2634-500	5m	Straight
2632-100	1m	Angled
2632-200	2m	Angled
2632-300	3m	Angled
2632-500	5m	Angled

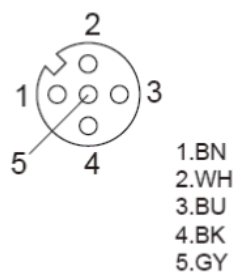

The M12 COM1 CONN Diagram

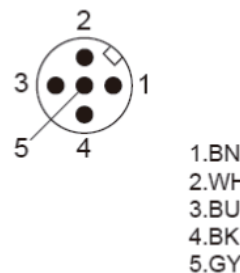

The M12 COM2 CONN Diagram


MDX COM1 CONN		MDX COM2 CONN	
Pin	Signal	Pin	Signal
1	Receive Data RX+	1	Receive Data RX+
2	Receive Data RX-	2	Receive Data RX-
3	Transmit Data TX+	3	Transmit Data TX+
4	Transmit Data TX-	4	Transmit Data TX-
5	Reference GND	5	Reference GND

**Four-Wire Configuration**

Four-Wire Systems utilize separate transmit and receive wires. One pair of wires must connect the host's transmit signals to each drive's RX+ and RX- terminals. The other pair connects the drive's TX+ and TX- terminals to the host's receive signals. A logic ground terminal is provided on each drive and can be used to keep all drives at the same ground potential.


Because the host in a four-wire system never needs to disable its transmitter, software is simplified. Some converters make this process very difficult to implement and can delay communications.

**NOTE: If the PC does not have an RS-485 serial port, a converter is required. You can contact MOONS' to buy a USB to RS-485 converter.**

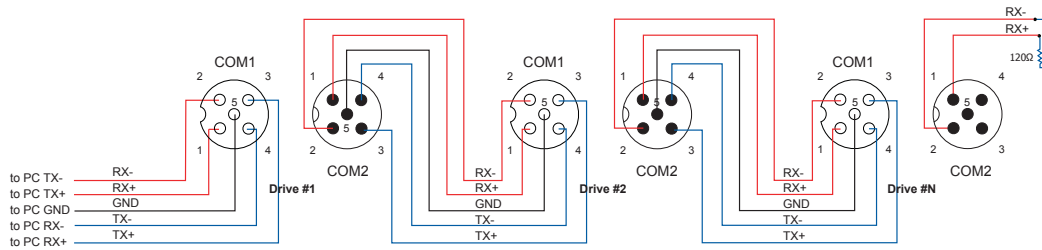

**Two-Wire Configuration**

In a 2-wire system, the host must disable its transmitter before it can receive data. This must be done quickly before a drive begins to answer a query. The MDX includes a transmit delay parameter that can be adjusted to compensate for a host that is slow to disable its transmitter. This adjustment can be made over the network using the TD command, or it can be set using the Artemis software. It is not necessary to set the transmit delay in a four wire system.

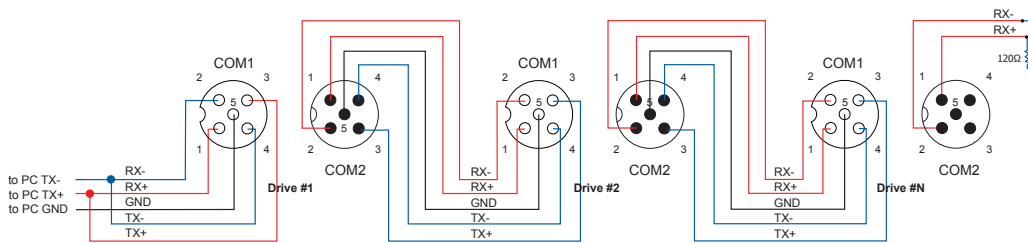

### Assigning Addresses

Before the entire system is wired, each drive will need to connect individually to the host computer so that it can be assigned a unique address.

Once the drive has been connected to the PC as described above, launch the Artemis software, select a right COM port and then apply power to the drive. If a drive has already been configured, click the Upload button so that the Artemis settings match those of the drive. When operating the drive in SCL mode it will need to be assigned an address. This is done on the Drive Configuration tab where a list of address options can be seen. The numerals 0..9 or the special characters ! " # \$ % & ' ( ) \* + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ may be used as addresses. Make sure each drive on the network has a unique address. On a 2-wire network, the Transmit Delay may also need to be set. Most adapters work well with 10 milliseconds. Once the address has been assigned, click Download to save the settings to the drive.

**3. Control Mode Settings**

**Node ID**

<b>1</b>	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/	0
1	2	3	4	5	6	7	8	9	:	;	<	=	>	?	@	

Power-Up BaudRate: 115200 bit/s(bps)

Transmit Delay: 10 ms


**Data Format**

Hexadecimal  Decimal

Auto Execute Q Program at Power Up


### 3.2.2 Connecting to a Host using CANopen

Two 5-pin M12connectors are used for the communications interface of a MDX CANopen version. Only COM1 can be used to configure the MDX drive by RS-232 serial interface.

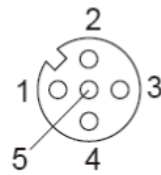

- 1.BN
- 2.WH
- 3.BU
- 4.BK
- 5.GY

The M12 COM1 CONN Diagram

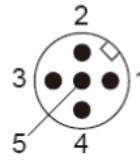

- 1.BN
- 2.WH
- 3.BU
- 4.BK
- 5.GY

The M12 COM2 CONN Diagram


MDX COM1 CONN		MDX COM2 CONN	
Pin	Signal	Pin	Signal
1	RS232 Transmit TX	1	NC
2	RS232 Receive RX	2	NC
3	Reference GND	3	Reference GND
4	CAN H	4	CAN H
5	CAN L	5	CAN L

Use MOONS' communication mating cables following:

Model	Length	Shape
1642-200	2m	Straight
2634-100	1m	Straight
2634-200	2m	Straight
2634-300	3m	Straight
2634-500	5m	Straight
2632-100	1m	Angled
2632-200	2m	Angled
2632-300	3m	Angled
2632-500	5m	Angled



The RS-232 interface is used for configuration, tuning, node ID setting and Q program downloading. The CANopen network could be connected in a daisy-chain fashion, with a 120 ohm terminating resistor at each end of the network.

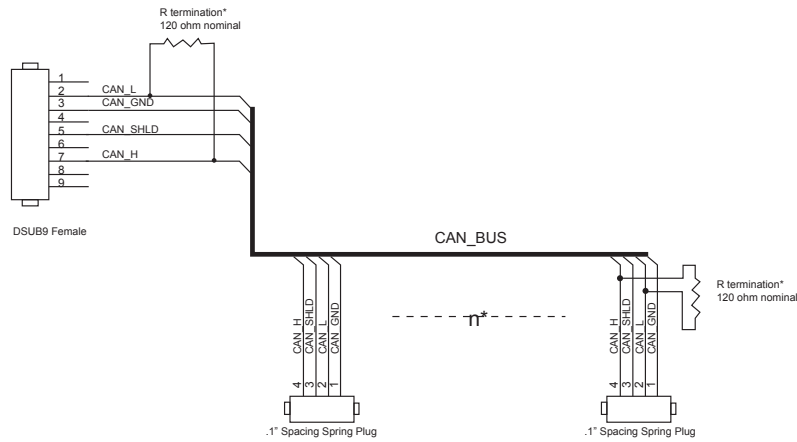

R termination:  
Network must be terminated at each  
end with a 120 ohm resistor.

n:  
Cable may be made with up to 127 drive  
connectors. Termination is only required  
at each end.


**Note:** If the PC does not have an RS-232 serial port, a USB to RS-232 Serial Converter will be needed. You can contact MOONS' to buy a USB to RS-232 converter.



**Warning:** The RS-232 circuitry does not have any extra electrical “hardening” and care should be taken when connecting to the RS-232 port as hot plugging could result in circuit failure. If this is a concern the RS-485 version which has “hardening” built into the port input and output should be used.


### 3.2.2.1 Node ID

Each node on a CANopen network must have a unique Node ID. The Node ID is configured by using Artemis. The range of the CANopen Node IDs is 1 - 127. Any changes to the NOD require either a power cycle or a CANopen reset command to take effect.






### 3.2.2.2 Setting the Baud rate

The CANopen network baud rate is set by using Artemis software. The baud rate must be the same for all nodes on the CANopen network. Any changes to the baud rate require either a power cycle or a CANopen reset command to take effect.

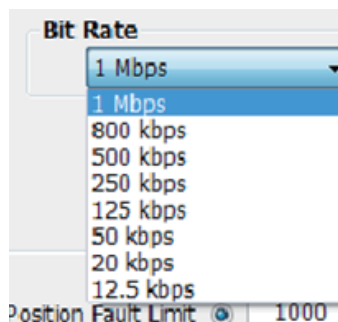

### 3.2.3 Choosing the Right COM Port

- Open the “Device Manager” on the PC. If the PC has an built-in RS-232 serial port, “Ports (COM & LPT)” (1) will be displayed. Connect the PC and drive with the included RS-232 communication cable. Choose the connected COM(n) port in the Artemis software.
- If the PC does not have an RS-232 serial port, or has one but in using. A USB to RS-232 serial port adapter will be needed. Open the “Device Manager” on the PC. There may or may not be a “Ports” selection. (2) Connect the adapter to the PC, this USB adapter COM port should then be displayed. (3) Choose this new COM(n) port in the Artemis software.

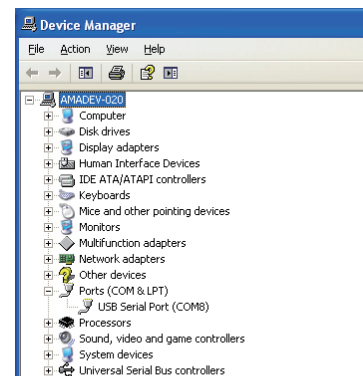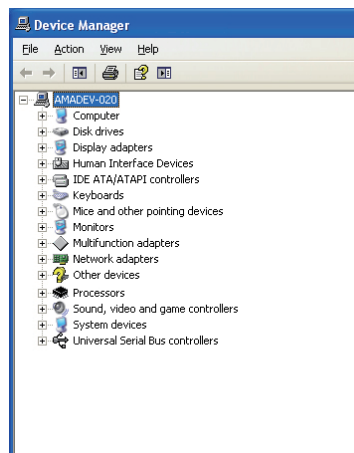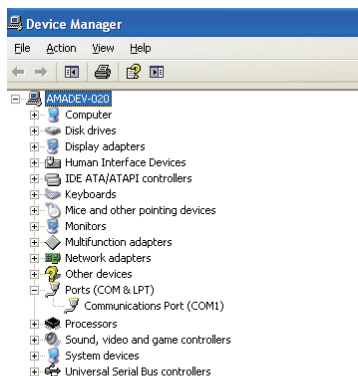


## 3.3 Inputs and Outputs

### 3.3.1 Inputs

- The MDX has three types of inputs:
- High speed digital inputs: step & direction signal or encoder following, 5 to 24 volt logic
- Low speed digital inputs: enable, alarm clearing signal (or other function configured by software), 5 to 24 volt logic
- Analog inputs for analog speed torque and positioning modes

All drives include 5 digital inputs and 2 analog inputs:


- X1/STEP & X2/DIR are high-speed digital inputs for commanding position. Quadrature signals from encoders can also be used. When not being used for the Step & Direction function these inputs can be used for CW & CCW step, (start/stop)/direction (oscillator mode), or general purpose input.
- X3, X4 and X5 are low speed software programmable inputs and can be used for Motor Enable/ Disable and Alarm/Fault Reset function, CW/CCW Limit, or general purpose input.
- AIN1 and AIN2 are two single-ended analog inputs for analog command input signals. They can accept 0-+10 volts and the gain, filtering, offset and dead-band can be set. These two analog inputs also can be configured to one -10~+10V differential analog input.

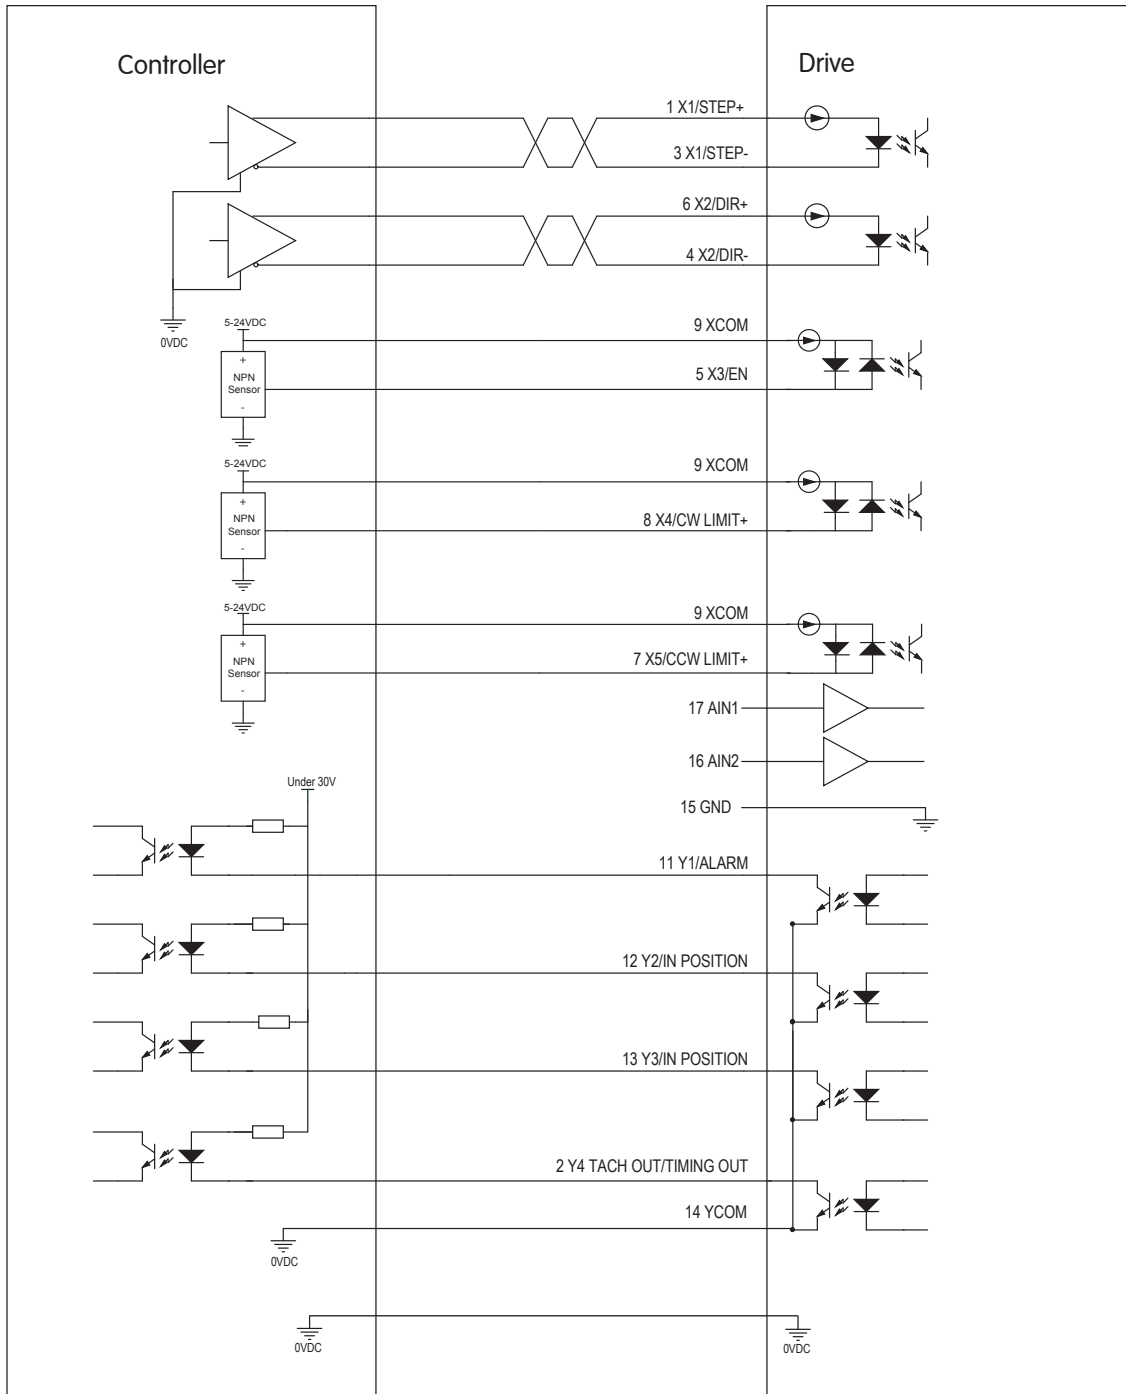

### 3.3.1.1 Connector Pin Diagram

Use MOON' IO mating cables as followed:

Model	Length	Shape
1638-100	1m	Straight
1638-200	2m	Straight
1637-100	1m	Angled
1637-200	2m	Angled

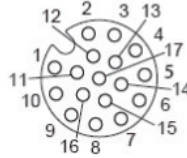

	1.BN
10.VT	2.BU
11.GY/PK	3.WH
12.RD/BU	4.GN
13.WH/GN	5.PK
14.BN/GN	6.YE
15.WH/YE	7.BK
16.YE/BN	8.GY
17.WH/GY	9.RD

The M12 IO CONN Diagram

MDX IO CONN					
Pin	Color	Signal	Pin	Color	Signal
1	BN	STEP+	11	GY/PK	Y1
3	WH	STEP-	12	RD/BU	Y2
6	YE	DIR+	13	WH/GN	Y3
4	GN	DIR-	2	BU	Y4
5	PK	X3	14	BN/GN	YCOM
8	GY	X4	15	WH/YE	DGND
7	BK	X5	16	YE/BN	AIN2
10	VT	NC	17	WH/GY	AIN1
9	RD	XCOM			

### 3.3.1.2 STEP & DIR Digital Inputs


The MDX drive includes two high-speed inputs: X1/STEP and X2/DIR. They accept 5 to 24 volt single-ended or differential signals, up to 2 MHz. Typically these inputs connect to an external controller that provides step & direction command signals.

The functions for X1/STEP and X2/DIR can be configured by Artemis software as following:


X1/STEP: Step signal; CW pulse signal; Quadrature signal A, start/stop signal below torque and velocity control mode or general purpose inputs.

X2/DIR : Direction signal; CCW pulse signal; Quadrature signal B, direction signal below torque and velocity control mode or general purpose inputs.


The diagrams below show how to connect the STEP & DIR inputs to various commonly used devices.

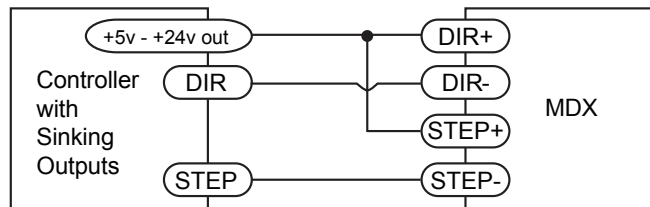


Connecting to Controller with Sinking Outputs

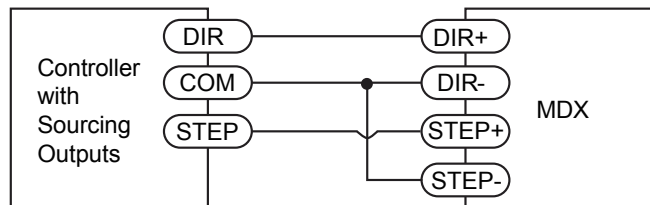

Connecting to Controller with Sourcing Outputs

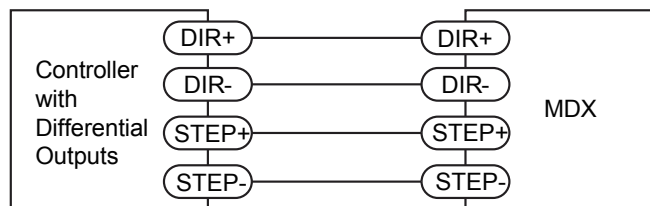


Connecting to Controller with Differential Outputs  
Many high-speed indexers have differential outputs

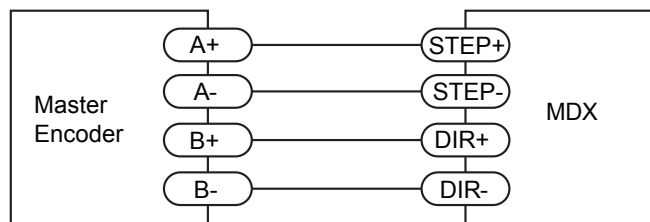


Wiring for Encoder Following

### 3.3.1.3 X3/X4/X5 Digital Inputs


- The X3/X4/X5 inputs are designed for low speed digital input operation between 5 to 24 volts optically isolated single-ended input.
- X3: Enable signal, Alarm clearing signal or general purpose inputs
- X4/X5: CW/CCW Limit function or general purpose inputs
- The diagrams below show how to connect the X3/X4/X5 Inputs to various commonly used devices.
- They can be used with sourcing or sinking signals, 5 to 24 volts. This allows connection to PLCs, sensors, relays and mechanical switches. Because the input circuits are isolated, they require a source of power. If you are connecting to a PLC, you should be able to get power from the PLC power supply. If you are using relays or mechanical switches, you will need a 5-24 V power supply.

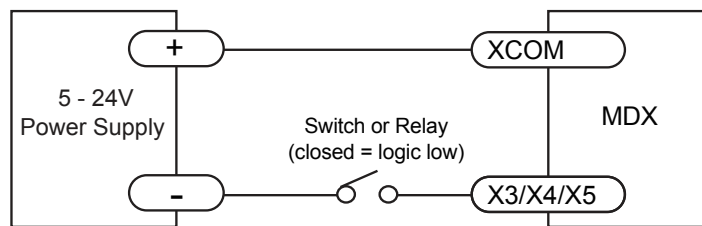

Connecting the Input to a Switch or Relay

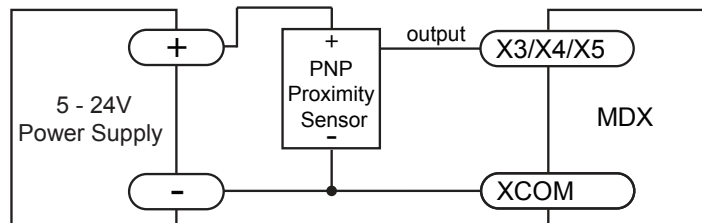

Connecting a PNP type Proximity Sensor to an Input  
(when prox sensor activates, input goes low)

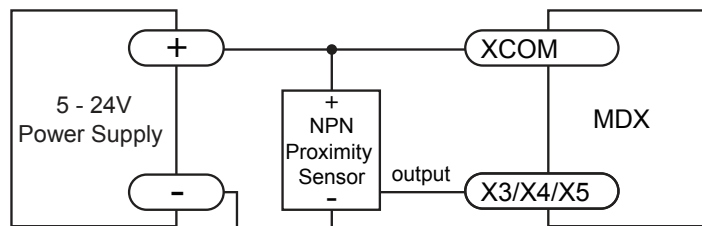

Connecting an NPN type Proximity Sensor to an Input  
(when prox sensor activates, input goes low)



### 3.3.2 AIN Input

The MDX drives have two single-ended analog inputs (AIN) which can accept a signal range of 0 to +10 volts. The drive can be configured to operate at a speed, torque or position that is proportional to the analog signal. Use the Artemis software to set the signal range, offset, dead-band and filter frequency.

AIN1 is used for Analog Position Control or Analog Velocity Control.

AIN2 is used for Analog Torque Control.

These two single-ended analog inputs can be configured to a differential analog input with the range of -10~+10vdc.

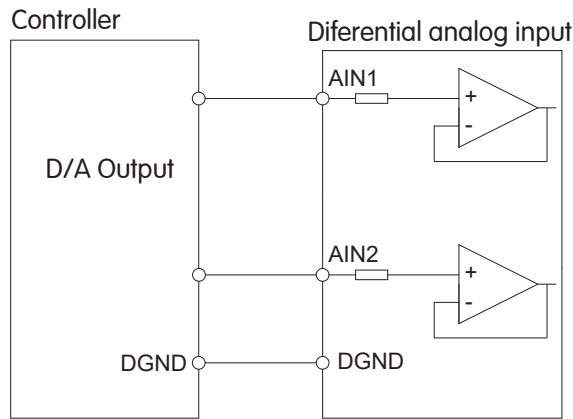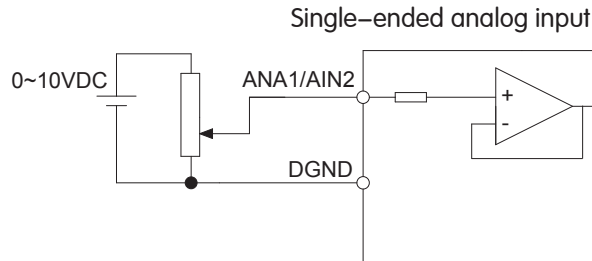




### 3.3.3 Programmable Output Y1/Y2/Y3/Y4

The MDX drives feature four optically isolated digital outputs (Y1 to Y4). Y1, Y2, Y3 and Y4 share a common terminal YCOM.


- Y1 can be set to indicate a fault output or general purpose Output.
- Y2 can be set to servo on status, torque reach or general purpose Output.
- Y3 can be set to indicate dynamic in position, velocity reach or general purpose Output.
- Y4 can be set to static in position, or general purpose Output.

These outputs can also be turned on and off by program instructions like Set Output (SO). The output can be used to drive LEDs, relays and the inputs of other electronic devices like PLCs and counters. Diagrams of various connection types follow.


**NOTE: Do not connect the output to more than 30 volts. The current through each output terminal must not exceed 100mA.**

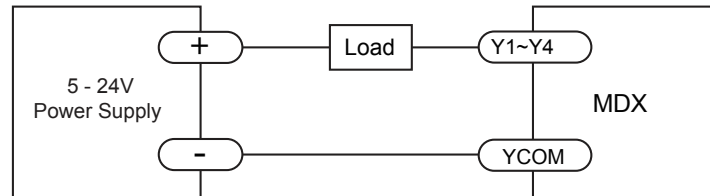

Connecting a Sinking Output

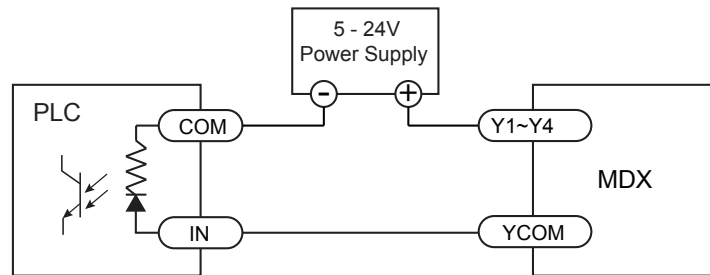

Connecting a Sourcing Output

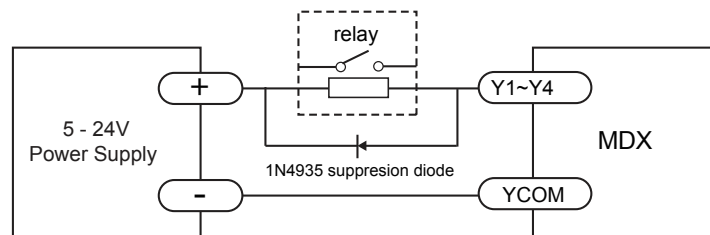


















Driving a Relay

## 4 Troubleshooting

### 4.1 Status (STAT) LED Error Codes





The MDX uses a bi-color LED to indicate status. When the motor is enabled, the LED slowly flashes green. When the LED is solid green, the motor is disabled. Errors are indicated by combinations of red and green flashes as shown below.

Code		Error	Alarm type	Status after alarm occurs
	Solid green	No alarm, motor disabled	No alarm	No change
	Flashing green	No alarm, motor enabled	No alarm	No change
	1 red, 1 green	<b>Position limit</b>	<b>Fault</b>	<b>Fault</b>
	1 red, 2 green	Move while disabled	Warning	No change
	2 red, 1 green	CCW limit	Warning	No change
	2 red, 2 green	CW limit	Warning	No change
	3 red, 1 green	<b>Drive over temperature</b>	<b>Fault</b>	<b>Fault</b>
	3 red, 2 green	<b>Internal voltage out of range</b>	<b>Fault</b>	<b>Fault</b>
	4 red, 1 green	<b>Power supply overvoltage</b>	<b>Fault</b>	<b>Fault</b>
	4 red, 2 green	<b>Power supply Too Low</b>	<b>Fault</b>	<b>Fault</b>
	4 red, 3 green	<b>Blank Q Segment</b>	<b>Fault</b>	<b>Fault</b>
	4 red, 4 green	Power supply Under Voltage	Warning	No change
	5 red, 1 green	<b>Over current</b>	<b>Fault</b>	<b>Fault</b>
	5 red, 2 green	Current limit	Warning	No change
	5 red, 3 green	<b>Over speed</b>	<b>Fault</b>	<b>Fault</b>
	7 red, 1 green	communication error	Warning	No change
	7 red, 2 green	flash memory error	Warning	No change

NOTE: Items in **bold italic** represent drive Faults, which automatically disable the motor.


## 5 Reference

### 5.1 Torque-Speed Curves

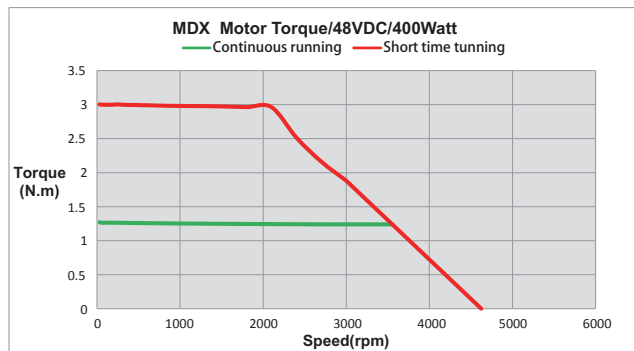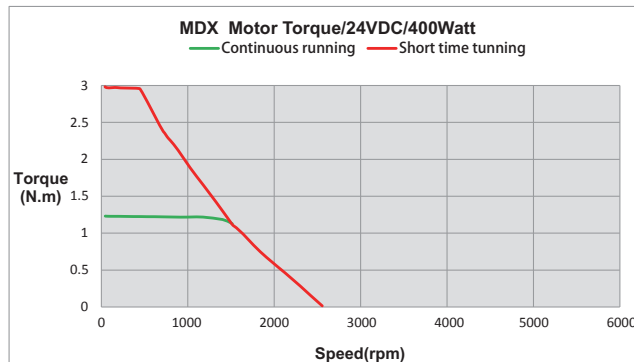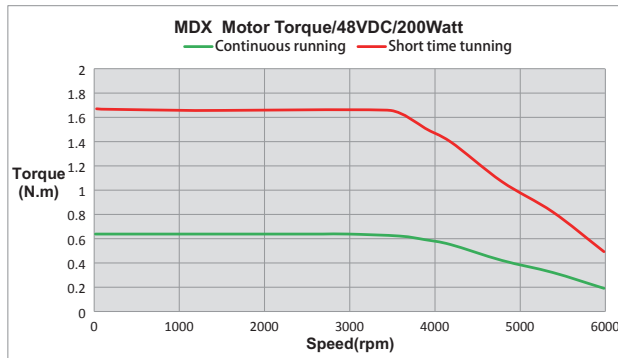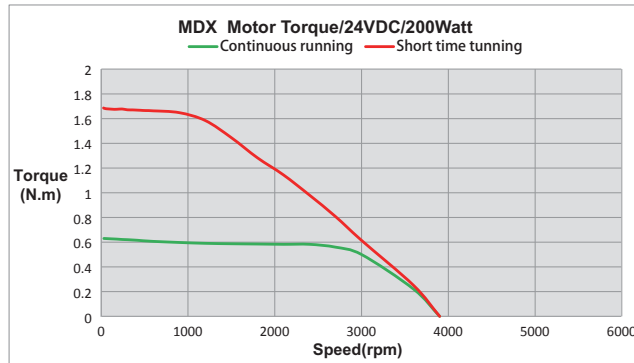


## 5.2 Mechanical Outlines

### 5.2.1 MDX IP65 200W

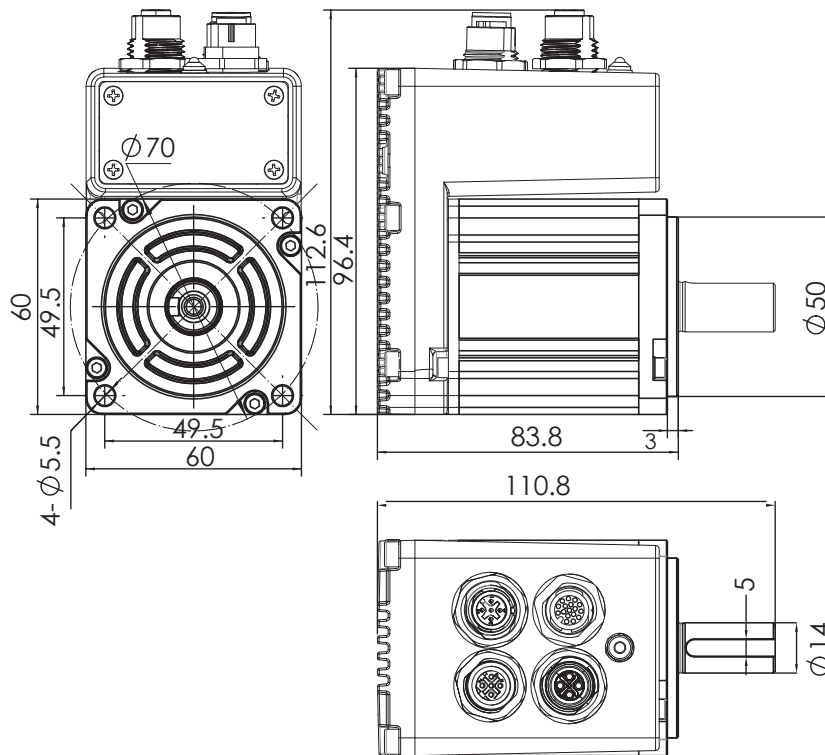


(Unit: mm)

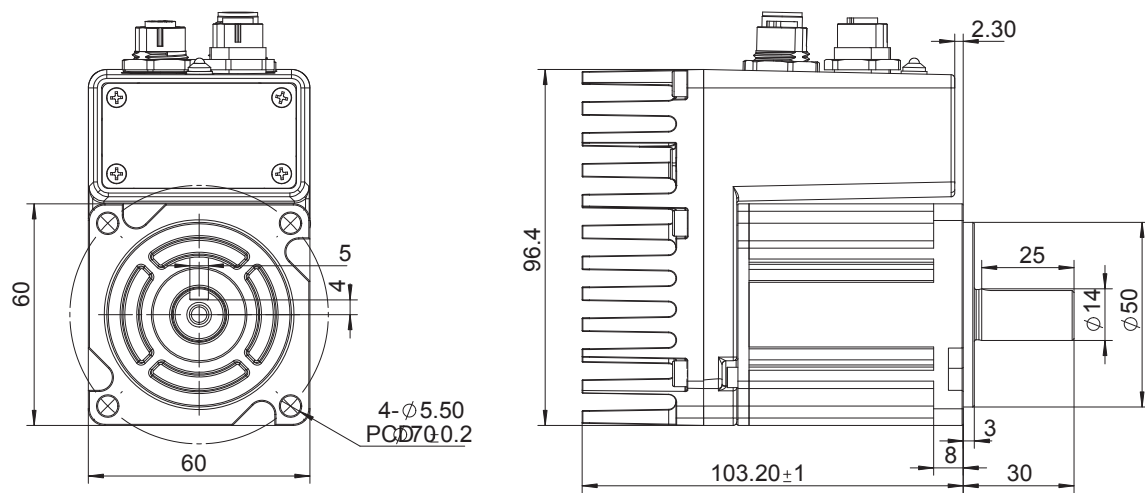


(Unit: mm)

5.2.2 MDX IP65 400W

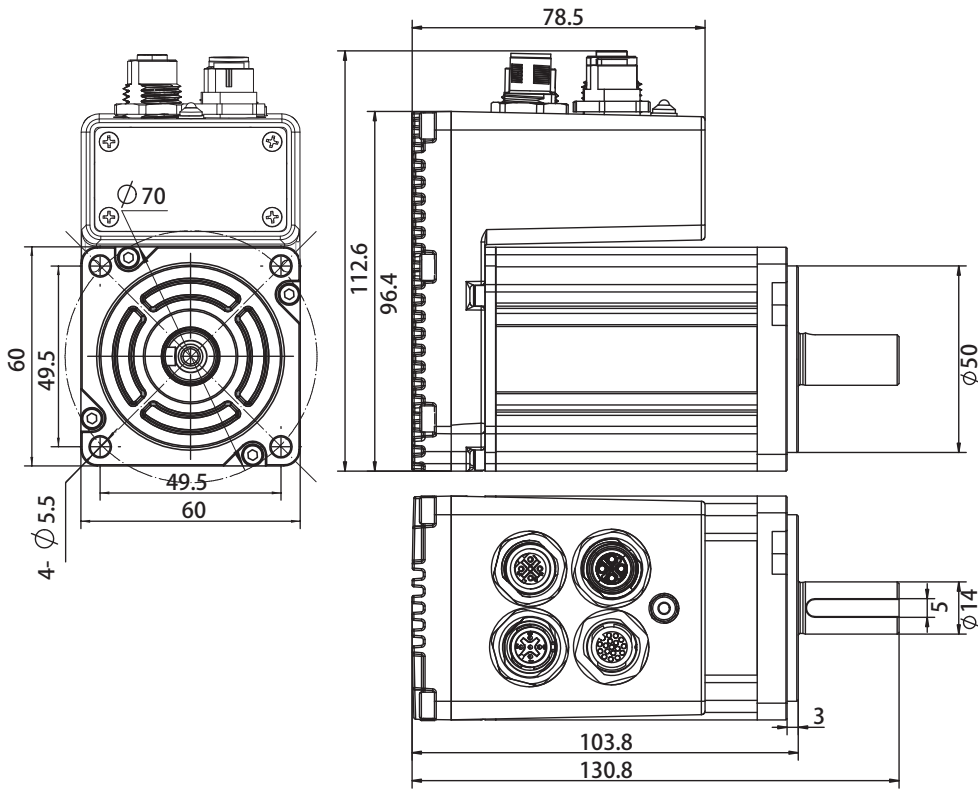

(Unit: mm)

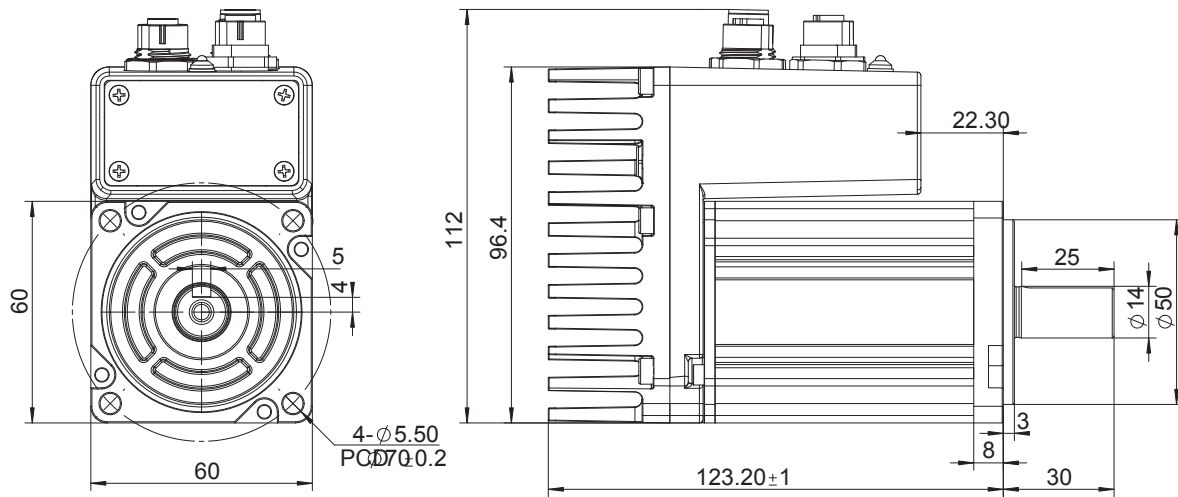


(Unit: mm)

### 5.3 Technical Specifications

Specifications	
Output Power	MDXK61GN: 200W rating MDXK62GN: 400W rating
Power Supply	External 24 - 60 VDC main power supply
Protection	Over-voltage, under-voltage, over-current, over-temp
Controller	
Encoder Feedback	1024 line magnetic encoder 16-bit magnetic encoder
Filters	Digital input noise filter, Analog input noise filter, Smoothing filter, PID filter, Notch filter
Modes of Operation	Torque control: Analog Torque, SCL commanded Velocity control: Fixed velocity, Analog velocity, SCL commanded Position control: Digital signal type Step & Direction, CW & CCW pulse, A/B Quadrature, Analog position, SCL commanded position Communication control: RS485 (support Modbus), CANopen mode control, Q Programming
Digital Inputs	X1/X2: Optically isolated, 5-24 volt, max. pulse frequency = 2 MHz Function: Pulse/Direction, CW/CCW Pulse, A/B quadrature (encoder following), (start/stop)/direction (torque and velocity mode), or general purpose input X3/X4/X5: Optically isolated, 5-24 volt, max. pulse frequency = 5 KHz Function: Servo on/off, Alarm/Fault Reset, CW/CCW Limit, or general purpose input
Digital Outputs	Y1/Y2/Y3/Y4: Optically isolated, 30V/100mA max Open Collector Output. Function: Alarm/Fault, In Position (dynamic/static), servo on status, torqu reached, velocity reached or general purpose output
Analog Input	Two single-ended analog inputs 0 to 10VDC. Resolution 12 bits (They can be configured to a -10 to 10VDC differential analog input.)
Communication Interface	RS-485, CANopen (RS-232)
Communication Interface	
Ambient Temperature	0 to 40°C when mounted to a suitable heatsink (If the ambient temperature of MDX is higher than 40°C, please install the drive in a well-ventilated location)
Humidity	Working and storage : 10-85% Max., non-condensing
Insulation Class	Class B
Rotor Inertia	MDXK61GN: 165 g•cm <sup>2</sup> MDXK62GN: 272 g•cm <sup>2</sup>

## 5.4 System Configuration and Accessories

### ◇ System Configuration

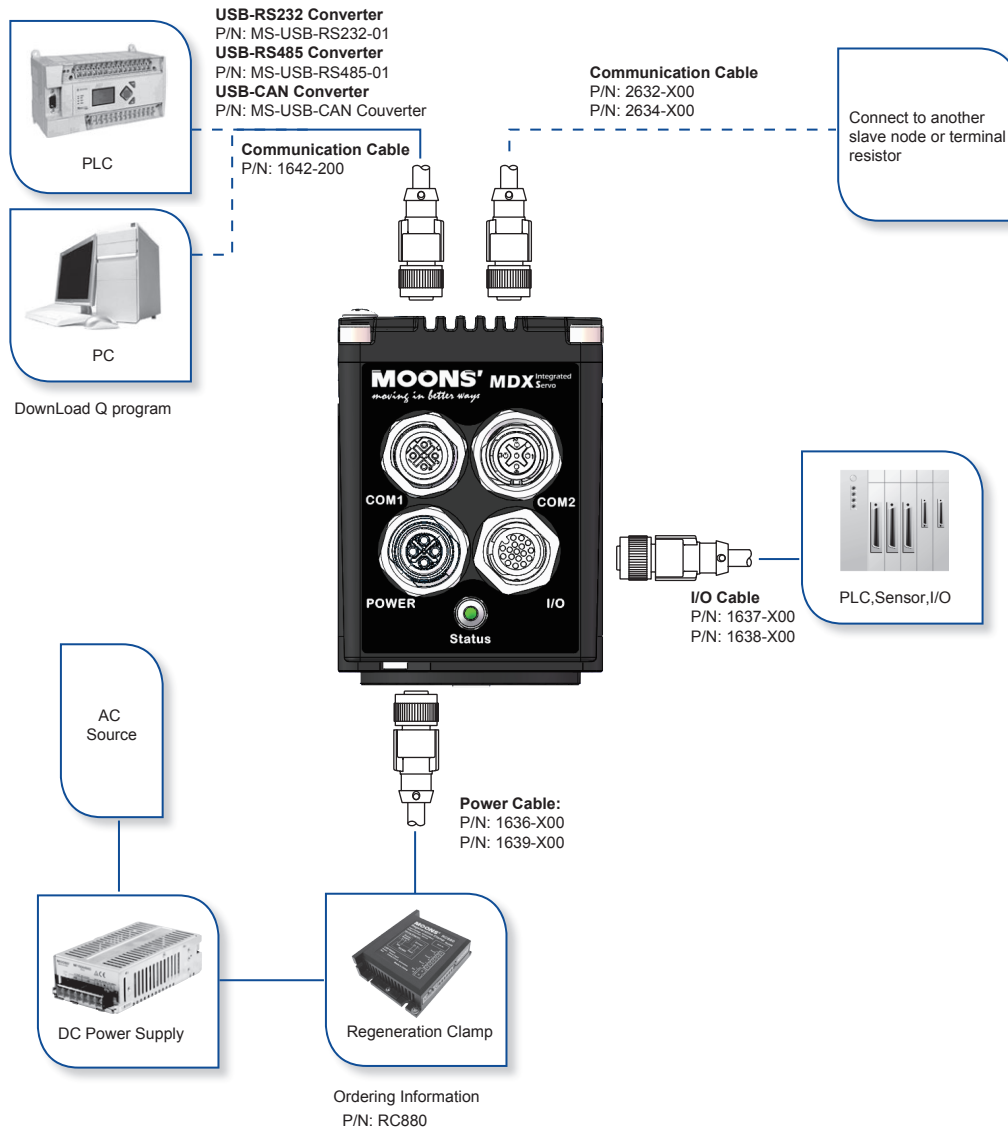


### ◇ Regeneration Clamp

P/N: **RC880**

When using a regulated power supply you may encounter a problem with regeneration. The kinetic energy caused by regeneration is transferred back to the power supply. This can trip the

overvoltage protection of a switching power supply, causing it to shut down. MOONS' offers the RC880 "regeneration clamp" to solve this problem. If in doubt, use an RC880 for the first installation. If the "regen" LED on the RC880 never flashes, you don't need the clamp.

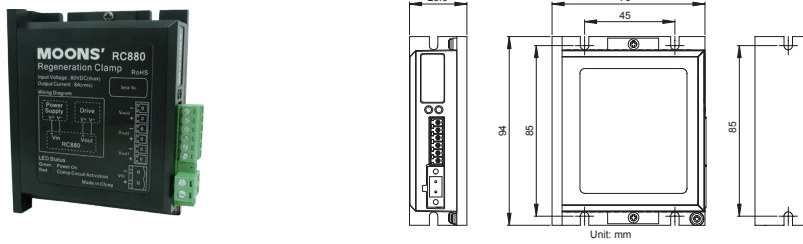

◇ USB Converter

Model: MS-USB-RS232-01  
Description: USB-RS-232 converter



Model: MS-USB-RS485-01  
Description: USB-RS-485 converter



Model: MS-USB-CAN-01  
Description: USB-CAN converter




◇ Accessories

I/O Cable


Right Angle Type

P/N	Lenght(L)
1637-100	1m
1637-200	2m

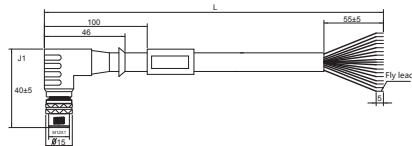

Straight Type

P/N	Lenght(L)
1638-100	1m
1638-200	2m




J1 Pin	Colour	J1 Pin	Colour
1	Brown(STEP+)	11	Gray/Pink(Y1)
3	White(STEP-)	12	Red/Blue(Y2)
6	Yellow(DIR+)	13	White/Green(Y3)
4	Green(DIR-)	2	Blue(Y4)
5	Pink/Red(X3)	14	Brown/Green(YCOM)
8	Gray(X4)	15	White/Yellow(DGND)
7	Black(X5)	16	Yellow/Brown(AIN2)
10	NC	17	White/Gray(AIN1)
9	Red(XCOM)		

Power Cable

◇ Right Angle Type


P/N	Lenght(L)
1636-100	1m
1636-200	2m
1636-300	3m
1636-500	5m

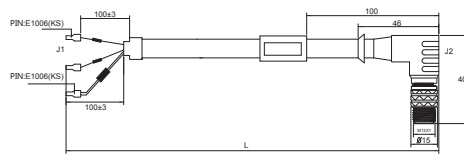

J1 Pin	J2 Pin	Function	Colour
1	1	V+	Red
2	2	V-	Yellow
3	3	NC	
4	4	NC	
shield		shield	Heat Shrink

◇ Straight Type

P/N	Lenght
1639-100	1m
1639-200	2m
1639-300	3m
1639-500	5m




4 green/yellow  
1 red 3 blue  
2 yellow



## Communication Cable


### ◇ Right Angle Type

P/N	Lenght(L)
2632-100	1m
2632-200	2m
2632-300	3m
2632-500	5m

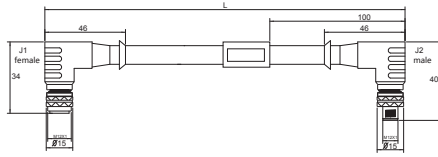

### ◇ Straight Type

P/N	Lenght(L)
2634-100	1m
2634-200	2m
2634-300	3m
2634-500	5m



J1 Pin	RS485	CAN
1	Brown(RX+)	Brown(RS232 TX)
2	white(RX-)	white(RS232 RX)
3	Blue(TX+)	Blue(GND)
4	Black(TX-)	Black(CAN-H)
5	Yellow/Green(GND)	Yellow/Green(CAN-L)


  

J2 Pin	RS485	CAN
1	Brown(RX+)	Brown(N/C)
2	white(RX-)	white(N/C)
3	Blue(TX+)	Blue(GND)
4	Black(TX-)	Black(CAN-H)
5	Yellow/Green(GND)	Yellow/Green(CAN-L)



### ◇ Communication Cable (COM1)

P/N	Lenght(L)
1642-200	2m



J1 Pin	RS485	CAN
1	Brown(RX+)	Brown(RS232 TX)
2	white(RX-)	white(RS232 RX)
3	Blue(TX+)	Blue(GND)
4	Black(TX-)	Black(CAN-H)
5	Yellow/Green(GND)	Yellow/Green(CAN-L)

## 5.5 SCL Command Reference

The Serial Command Language (SCL) was developed to give users a simple way to control a motor drive via a serial port. This eliminates the need for separate motion controllers or indexers to supply Pulse and Direction signals to the drive. It also provides an easy way to interface to a variety of other industrial devices such as PLCs and HMIs, which often have standard or optional serial ports for communicating to other devices. Some examples of typical host devices might be:

- A Windows based PC running MOONS' software
- An industrial PC running a custom or other proprietary software application
- A PLC with an ASCII module/serial port for sending text strings
- An HMI with a serial connection for sending text strings

SCL commands control the motion of the motor, use of the inputs and outputs, and configure aspects of the drive such as motor current and microstep resolution.

In SCL mode, the MDX receives commands from the host, executing them immediately or sending them to a command buffer and then executing them directly from the buffer. The MDX also can create a stored program for stand-alone operation.

The communications protocol of SCL is simple in that the host initiates all communication, with one exception. The only time the drive will initiate communication is at power-up. At that time, the drive will send an identifier to tell the software which drive is connected and what the firmware version is.

There are two types of SCL commands: buffered and immediate. Buffered commands are loaded into and then executed out of the drive's command buffer. Buffered commands are executed one at a time and in sequential order. The buffer can be filled with commands without the host controller needing to wait for a specific command to execute before sending the next command. Special buffer commands enable the buffer to be loaded and to pause for a desired time.

Immediate commands are not buffered, but are executed immediately, running in parallel with a buffered command if necessary. Immediate commands are designed to access the drive at any time and can be sent as often as needed. This allows a host controller to get information from the drive at a high rate, most often for checking drive status or motor position.

The basic structure of a command packet from the host to the drive is always a text string followed by a carriage return. The text string is composed of the command itself, followed by any required parameters. A carriage return denotes the end of transmission to the drive.

The syntax of the command is:

XXAB<cr>

where XX designates the command (always composed of 2 uppercase letters), and A and B define the possible parameters. These parameters can vary in length, can be letters or numbers, and are often optional. Once a drive receives the <cr> (carriage return), it will determine whether or not it understood the command-if it did, it will either execute or buffer the command. The drive can also be programmed ahead of time to send a response as to whether or not it understood the command as well as any error code.

Some SCL commands transfer data to the drive for immediate or later use. These data values are stored in data registers and remain there until new commands change the values or power

is removed from the drive. Some data registers in a drive are Read-Only and contain predefined information about the drive which can also be read through SCL commands.

Because of the intense nature of serial communications required in host mode applications, there is a serial communication Protocol (PR) command available that will adjust a drive's serial communications protocol to best fit an application. Typically this command is used when configuring a drive and saved as part of the startup parameters. But it can be used at any time to dynamically alter the serial communications.

The Host Command Reference contains the complete command listing as well as instructions on connecting and configuring the MDX for use in SCL mode, using the Data Registers and the Protocol command. It also contains detailed information on:

- Host Serial Communications
- Host Serial Connections
- Alarm and Status Codes
- Working with Inputs and Outputs

The Host Command Reference is available from the MOONS' website at <http://www.moonsindustries.com> under Products/Drives1/Downloads/manual.

## 6 Contacting MOONS'



### ★ Headquarters SHANGHAI AMP&MOONS' AUTOMATION CO.,LTD.

No. 168 Mingjia Road Industrial Park North  
Minhang District Shanghai 201107, P.R. China  
Tel: +86(0)21-5263 4688  
Fax: +86(0)21-6296 8682  
Web: www.moonsindustries.com  
E-mail: ama-info@moons.com.cn

#### ■ Shenzhen Branch Office

Room 503, Building A7, Nanshan iPark, No.1001,  
Xueyuan Ave, Nanshan Dist, Shenzhen 518071, P.R. China  
Tel: +86 (0)755 25472080  
Fax: +86 (0)755 25472081

#### ■ Beijing Branch Office

Room 816, Tower B, China Electronics Plaza, 3 Danling  
Street, Haidian District, Beijing 100080, P.R. China  
Tel: +86 (0)10 58753312  
Fax: +86 (0)10 58752279

#### ■ Qingdao Branch Office

Room 1012, Zhuoyue Tower, No.16 Fengcheng Road,  
Shibei District, Qingdao 266000 P. R.China  
Tel: +86 (0)532-8096 9935  
Fax: +86 (0)532-8091 9938

#### ■ Wuhan Branch Office

Room 3001, World Trade Tower, No.686 Jiefang Avenue,  
Jiangnan District, Wuhan 430022 P.R.China  
Tel: +86 (0)27-8544 8742  
Fax: +86 (0)27-8544 8355

#### ■ Cheng Du Branch Office

Room 1917, Western Tower, 19, 4th Section of South People  
Road, Wuhou District, Chengdu 610041, P.R. China  
Tel: +86 (0)28 85268102  
Fax: +86 (0)28 85268103

#### ■ Xi'an Branch Office

Room 1006, Tower D, Wangzuo International City,  
1 Tangyan Road, Xi'an 710065, P.R. China  
Tel: +86 (0)29 81870400  
Fax: +86 (0)29 81870340

#### ■ Ningbo Branch Office

Room 309, Block B, Taifu Plaza, No. 565 Jiangjia Road  
Jiangdong District Ningbo, 315040 P.R. China  
Tel: +86 (0) 574-8705 2739  
Fax: +86 (0) 574-8705 2365

#### ■ Guangzhou Branch Office

Room 4006, Tower B, China Shine Plaza, 9 Linhe Xi Road,  
Tianhe District, Guangzhou 510610, P.R. China  
Tel: +86 (0)20 38010153  
Fax: +86 (0)20 38103661

#### ■ MOONS' INDUSTRIES (AMERICA), INC.

1113 North Prospect Avenue, Itasca, IL 60143 USA  
Tel: +1 630 833 5940  
Fax: +1 630 833 5946

#### ■ MOONS' INDUSTRIES (SOUTH-EAST ASIA) PTE LTD.

33 Ubi Avenue 3 #08-23 Vertex Singapore 408868  
Tel: +65 6634 1198  
Fax: +65 6634 1138

#### ■ APPLIED MOTION PRODUCTS, INC.

404 Westridge Dr. Watsonville, CA 95076, USA  
Tel: +1 831 761 6555  
+1 800 5251609

#### ■ MOONS' INDUSTRIES EUROPE S.R.L.

Via Torri Bianche n.1 20871 Vimercate (MB) Italy  
Tel: +39 039 626 0521  
Fax: +39 039 963 1409

#### ■ LIN ENGINEERING, INC.

16245 Vineyard Blvd., Morgan Hill, CA 95037  
Tel: +1 408 9190200  
Fax: +1 408 9190201

#### ■ MOONS' INDUSTRIES JAPAN CO., LTD

Room 602, 6F, Shin Yokohama Koushin Building,  
2-12-1, Shin-Yokohama, Kohoku-ku, Yokohama,  
Kanagawa, 222-0033, Japan  
Tel: +81 (0)45 4755788  
Fax: +81 (0)45 4755787